

DESIGNED TO LAST

5 YEAR WARRANTY



www.dbablinds.com.au



DESIGNED
BLINDS
AUSTRALIA®

DESIGNED BLINDS AUSTRALIA®

5 Year Warranty

"The DESIGNED BLINDS AUSTRALIA® 5 Year Warranty" is designed to ensure a thoroughly satisfying experience when selecting, purchasing and living with your window fashion products. If you are not thoroughly satisfied, please contact your distributor (place of purchase).

These are the details of the warranty which is provided to the original purchaser for a period of five years from the date of installation:

Covered

- DESIGNED BLINDS AUSTRALIA® products are covered for defects in materials, workmanship or failure to operate
- Operational cords
- All internal mechanisms
- Components, brackets
- Fabric delamination.

Defective products or components will be repaired or replaced.

Note:

DESIGNED BLINDS AUSTRALIA® MOVE® Remote Control Handsets are covered for 2 years from the date of purchase. Different warranty periods and terms apply for commercial products and applications.

Not Covered

- Any conditions caused by normal wear and tear
- Abuse to the product, such as alterations, accidents, misuse
- Exposure to the elements (sun damage), discolouration over time
- Failure to follow instructions with respect to measurement, proper installation, cleaning or maintenance
- Warping due to exposure to high humidity e.g.; kitchens/bathrooms or natural variations in grain, colour and texture for Timber Venetian Blinds and other timber products
- Liability is limited to repair or replacement. The cost of removal and reinstallation is excluded
- A call out fee may apply, which is fully refundable for valid warranty claims.

In no event shall Hunter Douglas Limited (the owner of the DESIGNED BLINDS AUSTRALIA® Brand) or its licensed fabricators/distributors be liable or responsible for incidental or consequential damages or for any other direct or indirect damage, loss, cost, expense or fee.

To Obtain Warranty Service

1. Contact your distributor (place of purchase) for warranty assistance
or
2. Contact DESIGNED BLINDS AUSTRALIA® Customer Service at 1800 686 856 for assistance in obtaining warranty service or for further explanation of our warranty.



DESIGNED BLINDS AUSTRALIA®

Installation & Care Instructions

Thank you for investing in quality window furnishings by Designed Blinds Australia. To help keep your blinds looking their best the following information is provided as a guide.

GENERAL INFORMATION

Roman Blind Installation

It is essential that the blind is mounted at a height that will allow for settling out. If a window is out of square, please use techniques such as 'packing' to ensure that the blind hangs square. For more information on settling out, please consult Designed Blinds Australia's Customer Service team on 1800 686 856.

Roman Blind Operation

When raising or lowering your cord operated roman blind, please avoid dragging the cord along the edge of the blind. This will assist the longevity of the fabric.

Roller Blind Installation

At the time of installation, tracking adjustments will only be required if the fabric threatens to run into the brackets.

Note: a small amount of sideways movement in the fabric is normal. Before adjusting the tracking of a roller blind, please use a spirit level to check that the blind has been installed level. If a window is out of square, please use techniques such as 'packing' to ensure that the blind hangs square. For further information on how to track roller blinds, please consult Designed Blinds Australia's Customer Service team on 1800 686 856.

Roller Blind Operation

Roller blinds are finished with ultrasonically sealed edges and without side hems. Please ensure that the blind rolls up and down straight by raising and lowering the blind with moderate speed. Avoid letting the chain rub on the edge of the fabric as this can result in fraying of the fabric.

DESIGNED BLINDS AUSTRALIA®

Installation & Care Instructions

CHILD SAFETY INSTALLATION INSTRUCTIONS

Warning:

Young children can be strangled by looped cords, looped chains and cords that run through window coverings. To avoid strangulation and entanglement keep cords out of reach of young children.

To reduce the risk of strangulation, window coverings must be installed in such a way that a loose cord cannot form a loop 220mm or longer at a height of less than 1600mm above floor level. Cord cleats and cord guides/tensioners provide a solution to this requirement.

Installation Instructions – Cord Cleats

Attach the cord cleats 153mm to 305mm apart at a height of at least 1600mm above floor level to prevent children from unwinding the cord from the cleat. Take into account that a child may stand on a baby cot or other furniture in an attempt to reach the cord. Once the cleats are attached, wrap the excess cord around them after each use as shown at right.



Cord with Cleats

Installation Instructions - Cord Guide / Tensioner

All chain operated blinds and cord operated Glide blinds must be installed with the guide/tensioner that is provided. When installed, the guide/tensioner should hold the chain or cord taut and close to the blind or mounting surface in a way that makes the position of the guide/tensioner fixed and immobile..

It is very important to always install a cleat or guide/tensioner to ensure that your installation complies with Australian safety standards.

Installing the Hooktype Cord Guide / Tensioner

Step 1. The hooktype guide/tensioner (shown right) can be either face fitted or side fitted.

Step 2. Clip the chain into the guide/tensioner. This will show you the correct position (height) to install the guide/tensioner.



Step 3. Choose the appropriate fixing method depending on surface. The guides/tensioners are suitable for installation onto the following surfaces:

- Timber
- Aluminium
- Gyprock (Spring Toggle)
- Brick (Wall Plug)


Step 4. Fix to wall.

DESIGNED BLINDS AUSTRALIA®


Installation & Care Instructions

Installing the Round Cord Guide/Tensioner


Step 1. Taking into consideration the positioning of the chain winder, mount face fix back plate to wall with guide/tensioner screws.

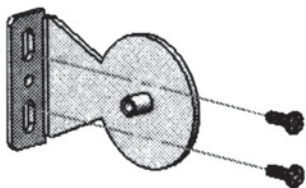


Step 2. Loop chain around chain wheel. Sit the chain wheel on the Chicago screw pin of the face fix back plate. To conceal the chain wheel, place the guide/tensioner cover over the chain wheel. Ensure the opening of the guide/tensioner cover is positioned at the top to allow the chain to operate with no interference. Screw in the tightening screw.

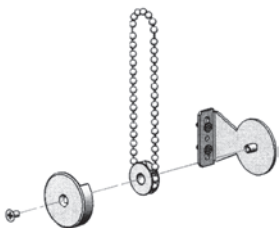

Step 3. Tighten the tightening screw with a screw driver.

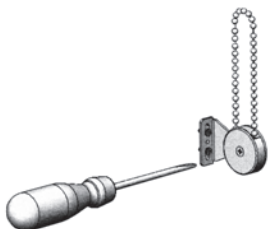

Step 4. To conceal the guide/tensioner screws, place the screw plate cover over the screws on the base of the face fix back plate. Note: The same process applies to blinds fitted with a reveal guide/tensioner.

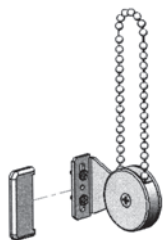

DESIGNED
BLINDS
AUSTRALIA®

DESIGNED BLINDS AUSTRALIA®

Cleaning & Maintenance

All blinds require some regular cleaning maintenance in order to preserve their integrity. In all cases, the cleaning process should first be tested in an inconspicuous area.

General Maintenance

Most roman blinds and roller blinds simply require regular vacuuming (with an upholstery attachment) in order to keep them in top condition. If you have venetian blinds we also recommend the use of a static duster to prevent dust build up.

Stain Removal

To remove wet embedded stains, sponge blind clean with a damp cloth. Use diluted washing liquid in warm water and avoid rubbing the stain. Do not immerse blinds in water.

Spot Cleaning

Small dry marks may be rubbed off quite effectively with a gum-based eraser (available in most art supply stores). If this fails, use the method described in the paragraph above.

PVC Coated Fabrics

Strong PVC coated fibreglass fabrics are particularly resistant to soiling and can be wiped, or vigorously rubbed with a soft cloth. These fabrics are more tolerant to detergents than most, and can be treated with more caustic cleaners if absolutely necessary.

To contact Designed Blinds Australia
Customer Service please call 1800 686 856.
www.dbablinds.com.au

